Lightweight oil to air coolers
Lightweight oil to water coolers
Cooler installation kits for all vehicles
Oilstats.

Remote oil filter heads & take off plates
Temperature gauge adaptors
Conversions to spin off filter
Anti surge pressure accumulators
Oil pumps
Classic dashboard instruments
We distribute

eroquip hase & fittings

Fire sleeve Quick connect couplings Stainless steel overbraid Also

Aston, Monza & Aero filler caps

Plus much more



Manufactured in England by

## Think Automotive Ltd

292 Worton Rd Isleworth, TW7 6EL Middx. England.

Tel: (020) 8568 1172 Fax: (020) 8847 5338



## OT/2 THERMOSTATIC OIL CONTROL

A positive control for engine oil temperature for use in conjunction with all types of oil cooler including vehicle manufacturers original equipment.

## **FITTING INSTRUCTIONS**

It is recomended that the oil cooler kit be fitted before the thermostat is installed.

- Select suitable place for fitting the thermostat away from moving parts and at a place where hoses run parallel.
- With ignition turned off (high tension lead disconnected), turn engine over on starter and note which pipe carries the oil supply from the engine.
- 3. Connect up hoses as shown on Fig. 1.


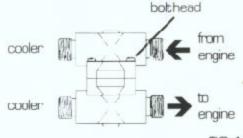


FIG 1

On some cars, especially BMC front wheel drive vehicles, the hoses do not run parallel for sufficient length for the thermostat to be fitted. In these cases the thermostat may be fitted diagonally as Fig.2.

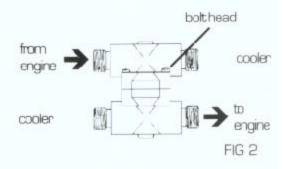

The thermostat is set to send the oil flow throgh the cooler at 80°C. At lower temperatures the flow takes the line of least resistance by-passing the colder, thicker oil in the cooler.

The "waxstat" which operates the oilstat will suffer permanent damage if temperatures

exceed 140°C, replacements can be supplied.